




INSTALLATION INSTRUCTIONS

REPLACEMENT PADS

- R3 Campa type
- R5 Campy 2000

- R3 Campa type
- R5 Campy 2000

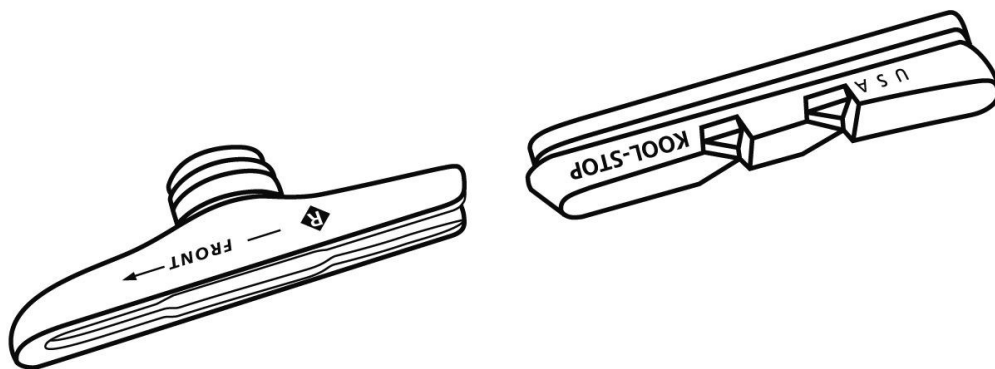

- Slide old pad out of holder.
- Insert replacement pad: left pad in left holder and right pad in right holder.

IMPORTANT: Designed for bicycle use only. Do not ride bike until brakes are checked and functioning properly. All Kool-Stop Pads meet or exceed C.P.S.C. and D.I.N bicycle standards.