




INSTALLATION INSTRUCTIONS

- R18 Weinmann 6 Dot

Weinmann 6 Dot

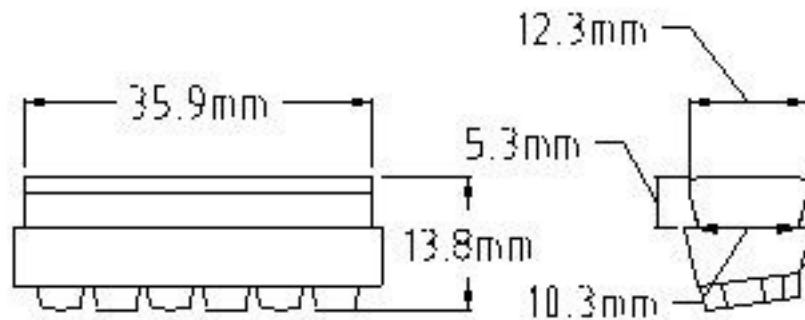

- Clean rim surface before installing new pads.
- Align the pads correctly without touching the tire.
- Check pad and rim alignment after the pads are broken in and after every ride.

IMPORTANT: Designed for bicycle use only. Do not ride bike until brakes are checked and functioning properly. All Kool Stop Pads meet or exceed C.P.S.C. and D.I.N bicycle standards.